

MANUAL SAFE LOCK CHANGE


- 1) Open the screw from Turn Lock with a Torx® 10 screwdriver
- 2) Remove the Turn Lock (rotary lever)



- 3) Attach the Safe Lock



- 4) Press the crank in position
- 5) Install screw and tighten to a maximum of 0,9 Nm

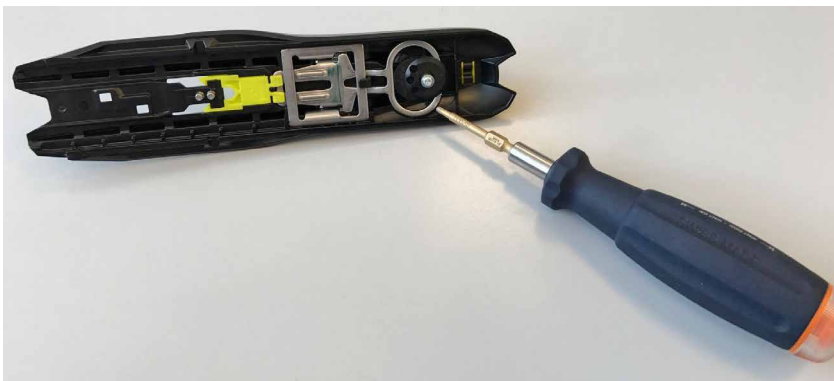

- 6) Check Safe Lock (open and turn it)

